

Trust





www.trust.com/20491/faq


YULA | WIRELESS GAMEPAD

1


USB

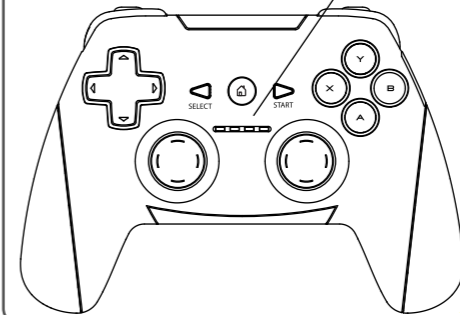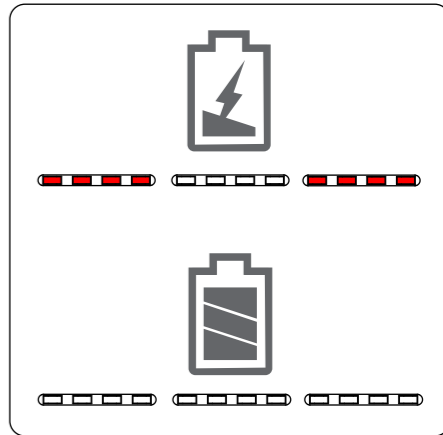

2

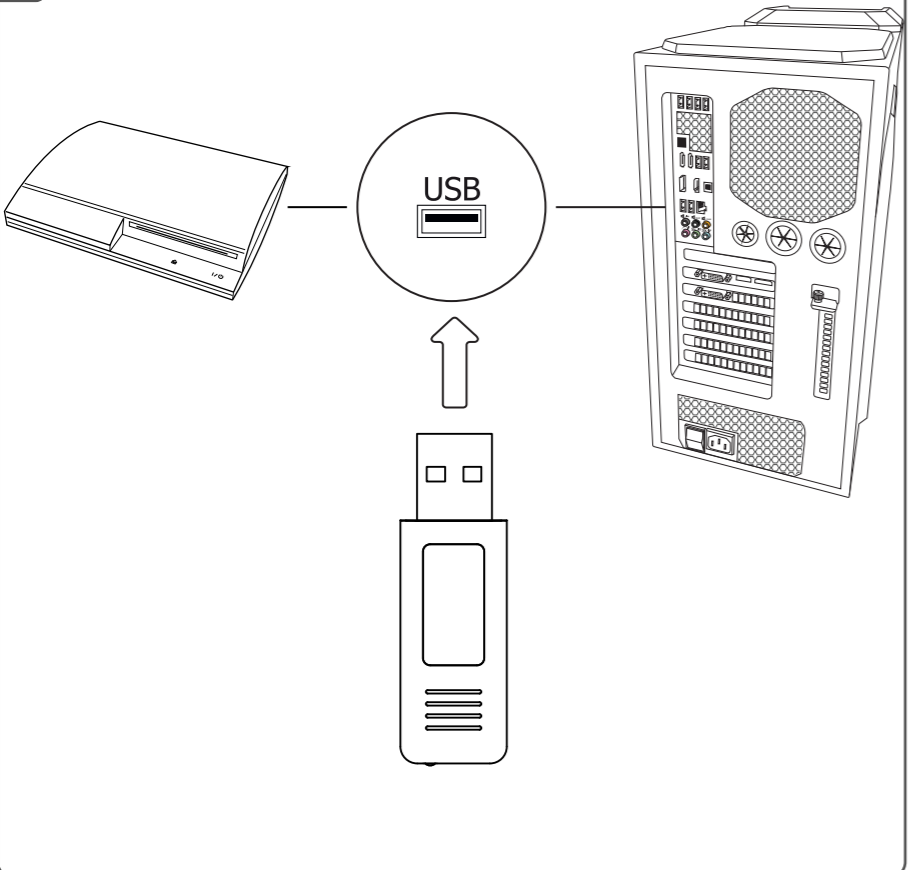

3

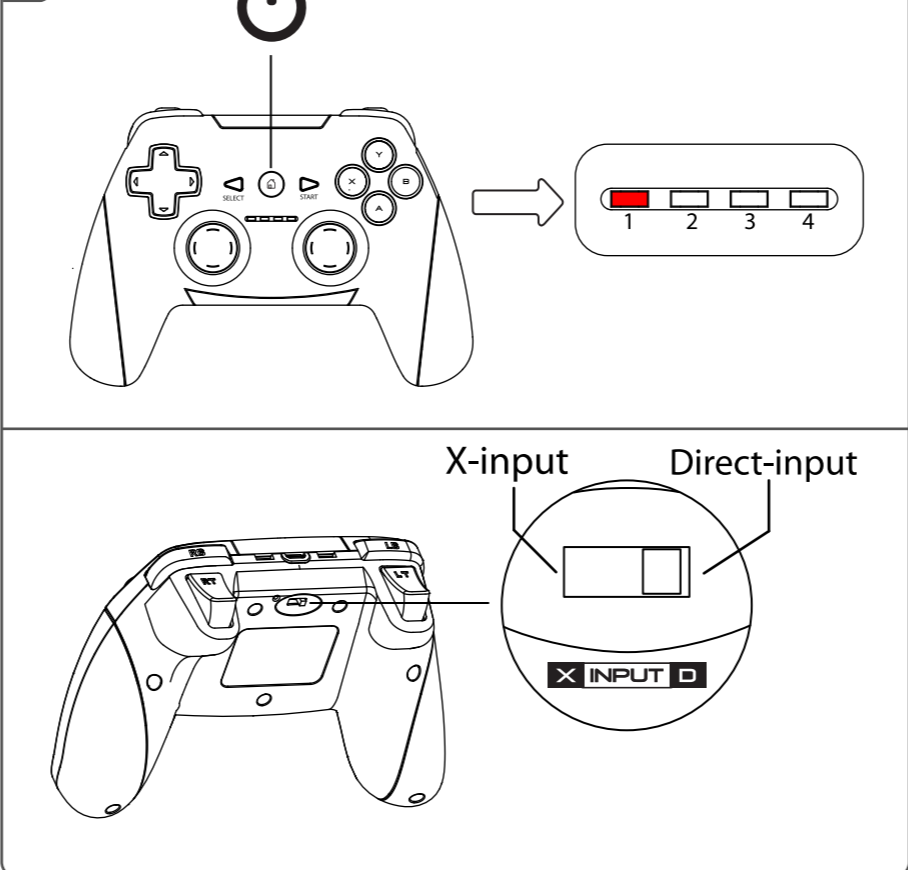

PC

Windows → Control panel → Devices and Printers

① Windows icon with gear
② Control panel icon
③ Devices and Printers icon
④ Game controller settings menu

Game Controller settings menu options:
 - Game controller settings (highlighted)
 - Create shortcut
 - Troubleshoot
 - Properties

Game Controllers window:

Controller	Status
USB Game Pad	OK

⑤ Properties button

USB Game Pad properties window:

Settings Test

Test the game controller. If the controller is not functioning properly, it may need to be calibrated. To calibrate it, go to the Settings page.

Axes: Z Axis, Z Rotation

X Axis / Y Axis

Buttons: 1-12

Point of View Hat