

## FRANÇAIS

## ENGLISH

## DEUTSCH

## NEDERLANDS

## ITALIANO

## ESPAÑOL

## PORTUGUÊS

## DANSK

  

	E781E	E781E	E781E	E781E	E781E	E781E	E781E
--	-------	-------	-------	-------	-------	-------	-------

**CHEVEUX - HAIR**

**PRO 40**

Made in China

**E781E**

Grâce à la technologie W-Tech TITANIUM présentant une géométrie de lame innovante, la tondeuse cheveux-barbe E781E de BaByliss offre une meilleure capture des poils et cheveux, même les plus épais, pour un résultat parfait obtenu en un temps record.

Veuillez lire attentivement les consignes de sécurité avant toute utilisation de l'appareil.

**CARACTÉRISTIQUES DE LA TONDEUSE**

1. 2 guides de coupe cheveux pour 32 longueurs (de 3 à 18mm et de 21 à 36 mm, avec un pas de 1 mm)
2. 1 guide de précision barbe 5 positions (0,5-1,5-2,5-3,5-4,5 mm)
3. Lames :
  - *Couteau mobile* : CMS (Chrome-Molybdene-Stainless Steel) : couteau ultrarésistant
  - *Couteau fixe*: Revêtement Titanium : pour une longévité accrue.
4. Bouton ON/OFF
5. Molette de réglage avec système de verrouillage intégré pour une hauteur de coupe sécurisée
6. Affichage latéral de la hauteur choisie
7. Témoïn de charge
8. Fiche pour charger l'appareil
9. Brosse de nettoyage

**ATTENTION, CET APPAREIL NE FONCTIONNE PAS SUR SECTEUR ET DOIT ÊTRE CHARGÉ AVANT UTILISATION.**

IMPORTANT INFORMATION CONCERNANT THE NI-MH BATTERIES OF THIS UNIT

To obtain and maintain the longest battery life possible, allow it to charge for 16 hours approximately every three months. Moreover, full battery life of the unit will only be obtained after three complete recharge cycles (a 16 hours cycle followed by two 8 hours cycles).

**CHARGING THE CLIPPER**

1. Plug the cord into the unit and connect the transformer. Before using the clipper for the first time, allow it to charge for 16 hours. Make sure the clipper's switch is in the OFF position.
2. Check that the charging indicator light is lit.
3. A full charge provides a minimum of 45 minutes' use of the clipper.
4. Subsequent charges should also be 8 hours.

**USE OF THE CUTTING GUIDES**

Very practical, the cutting guide guarantees an even cut. Always attach the cutting guide before turning on the clipper and turn the clipper off before changing or removing the guide.

• **To attach the cutting guide:**

1. Position the adjustment wheel of the clipper to the mark "3" on the side display (**Fig. 1**).
2. Attach the cutting guide over the front of the clipper by sliding the tabs on the side of the clipper into the corresponding grooves in the cutting guide (**Fig. 2**).
3. Then gently rotate and press until you hear it click into place (**Fig. 3**).
- **To remove the cutting guide (Fig. 4):**
1. Hold the sides of the cutting guide. Press the tab at the rear of the guide to release it.
2. Remove the cutting guide by rotating the clipper to the front and lifting the guide off.

**TURNING ON AND USING**

To adjust the clipper's cutting length, turn the grooved wheel (5) up or down. The selected length is displayed on the right or left side of the clipper. Switch the ON/OFF button.

You can change the cutting length at any time. Thanks to the SMART ADJUSTING SYSTEM, the length of the cut is maintained even if the angle of the clipper varies, so it guarantees precise result.

**MAINTENANCE**

Remove the cutting guide after each use. Cleaning the clipper blades regularly will maintain their optimal performance.

**Removable blades**

To make cleaning easier, the BaByliss clipper blades can be removed. Make sure the clipper is turned off. Hold the clipper with the blades pointing up and remove them by pressing the top of the blade. (**Fig. 5**)

Brush the blades using the cleaning brush to remove any hair. Rinse the blades. The device must never come into contact with water. Let the blades dry in the open air before putting them back onto the device.

**Self-lubricating blades**

The blades of your clipper have a reservoir pad that dispenses the amount of oil necessary for your clipper to operate properly, every time.

It is nevertheless recommended that you occasionally refill, when you notice the clipper isn't performing as well. Remove the blades as described above. Carefully squeeze a few drops of BaByliss oil onto the pad. (**Fig. 6**)

Then put the blades back on the clipper. BaByliss oil is specially formulated for clippers, it will not evaporate or slow the blades down. You can get new blades when these are worn or damage.

