

**Funkcje pilota
Reins^Ton**

INPUT TV



INPUT AV

MENU



OFF TIMER

3D

N

D. TV REC



VIERA TOOLS

VIERA Link

SD CARD

APPS

VIERA CAST

GUIDE



RED

GREEN

YELLOW

BLUE

i

EXIT

**Funkcje pilota
PANASONIC**

INPUT TV



INPUT AV

MENU



⌚ / OFF TIMER

3D

N

DIRECT TV REC



VIERA TOOLS

VIERA Link

SD CARD / SD HC

APPS

VIERA CAST / INTERNET

GUIDE



RED

GREEN

YELLOW

BLUE

i

EXIT

**Funkcje pilota
Reins^Ton**

OPTION

↩ / RETURN



OK



1

2

3

4

5

6

7

8

9

0



PR. ∨

PR. ∧



**Funkcje pilota
PANASONIC**

OPTION

↩ / RETURN / BACK



OK



1

2

3

4

5

6

7

8

9

0



↺ / LAST VIEW

PROGRAMME ∨

PROGRAMME ∧

⊗ / SURROUND

