

SUPER RETRO-CADE

INSTRUCTION MANUAL



Retro-bit and Super Retro are registered trademarks of Kool Brands, LLC. USB is a registered trademark of Universal Serial Bus Implementers Forum, Inc. HDMI is a registered trademark of HDMI Licensing, LLC. Mac is a registered trademark of Apple Inc. All other mentioned trademarks are either trademarks or registered trademarks of their respective owners. This product is not endorsed, manufactured, produced, sponsored or licensed by Universal Serial Bus Implementers Forum, Inc., HDMI Licensing, LLC. or Apple Inc. © 2012 Kool Brands, LLC. All games in this product are duly licensed by © CAPCOM, ©Irem Corporation, ©G-Mode Corporation, ©Arc Systems Works, ©Moto KIKAKU.

**Thank you for purchasing the Retro-Bit Super Retro-Cade!
We appreciate your continued support.**

We pride ourselves on producing fun and unique products, upholding a high standard of customer service, and seeing positive reviews from all those who are just as enthusiastic about retro-gaming as we are, but we also understand the value of feedback because it helps us shape our products to better suit customers like you. People like you are the reason we are able to make our products better, more enjoyable, and loads of fun... Thank you!



Bring the power of an arcade to your home with the Super Retro-Cade plug and play console by Retro-Bit®. Packed with over 90 popular retro games from Capcom, Data East, Irem and Technos. Access this archive of arcade classics from an intuitive user interface. Accompanied with two wired controllers compatible with your PC and Mac®. Ditch the quarters and revisit the arcade with Retro-Bit®.

TABLE OF CONTENTS

2	Safety Instructions
3	Package Contents
4	Console Components and Functions
5	Hooking up your Retro-Bit Super Retro-Cade Console
5	Operating your Retro-Bit Super Retro-Cade Console
6	Navigating the User Interface
9	Troubleshooting

WARNING

Stationary images in video games can “burn” into some television screens and may cause permanent picture damage or mark phosphor of the CRT. Avoid repeated or extended use of video games on large-screen projection televisions. Consult with your TV owner’s manufacturer manual before playing any games.

CAUTION

Before playing video games, be sure to observe and apply the following:

- Take intermittent 15 minute breaks, at least once an hour, when playing for extensive periods at a time.
- Refrain from playing if you are drowsy or fatigued.
- Play in a well-lit room
- Sit or stand at a relatively far distance from the TV when playing video games.

SAFETY

Read carefully before operating your Retro-Bit Super Retro-Cade console

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guidelines:

- Observe all warnings, precautions and instructions.
- Stop use and unplug the AC power cord from the electrical outlet immediately if the device functions in an abnormal manner or produces unusual sounds or smells.
- If the Super Retro-Cade console is not working properly after troubleshooting, contact customer support at service@retro-bit.com
- Do not remove the console exterior or disassemble the console. Do not use the console near water.
- Keep the console and all connecting cords and cables out of the reach of children.
- Do not touch the plug of the AC power cord with wet hands.
- Do not touch the console or connected accessories during an electrical storm.
- Do not touch the console or AC adapter for extended periods of time while the console is turned on as extended contact may cause low-temperature burns.
- Do not place the console and connected accessories on the floor or in a place where they may cause persons walking by to trip or stumble.

 
HEALTH

- Stop Playing and consult a physician if you experience any of the following:
 - Loss of awareness
 - Lightheadedness, nausea or a sensation similar to motion sickness
 - Altered vision
 - Disorientation or confusion
 - Facial muscle twitches
 - Shaking of arms or legs
 - Tired, uncomfortable or aching hands or arms
 - Tired, dry or aching eyes
 - Any unusual physical sensations
- When operating the unit, play in a well-lit room and keep a safe distance from the TV screen.
- Avoid prolonged use of the console. Take a break of about 15 minutes during every hour of play.
- Do not use the console when you are tired or short of sleep.
- Listening to sound continuously for a long time with a high volume may adversely affect the ears. Be careful especially when using headphones. Adjust the volume so that surrounding sounds can be heard.
- Do not let any young children or toddlers operate the Super Retro-Cade console without supervision.

PACKAGE CONTENTS

- Retro-Bit Super Retro-Cade Console
- 2 USB® Controllers
- HDMI® Cable
- Power Adapter
- Instructions Manual

CONSOLE COMPONENTS AND FUNCTIONS

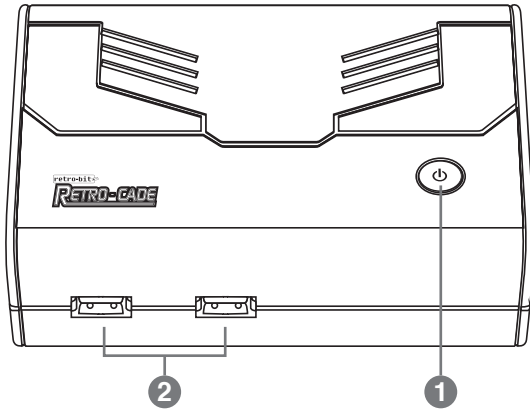

Console Components

TOP

1. Power Button

FRONT

2. USB® Controller Ports

SIDES

 
 
 
3. Air Vents

BACK

4. SD Slot
5. HDMI® Port
6. AV Port (V L R)
7. DC Port
8. Air Vent

CONTROLLER COMPONENTS

9. Select Button
10. D-Pad
11. Start
12. Operation Buttons (B,A,Y,X,L,R)

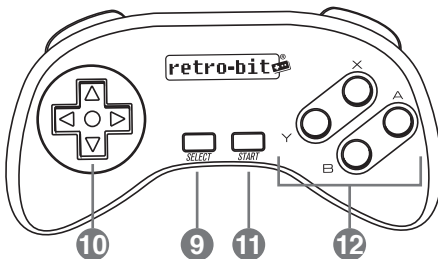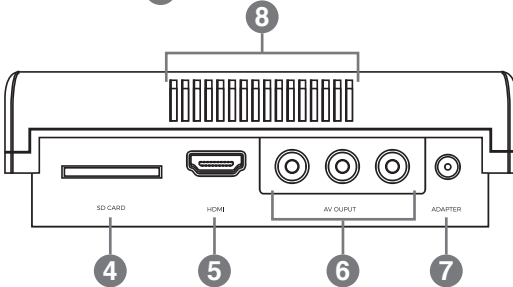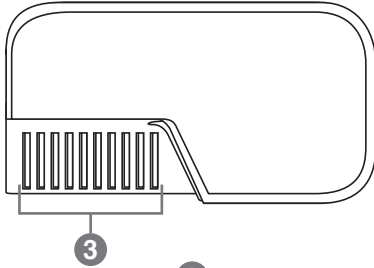

Hooking up your Super Retro-Cade Console

Connecting the AV cable

1. Connect one end of the supplied AV cable into the Super Retro-Cade Console AV port located on the back of the console:
 - a. Red & white into the (L R) sockets
 - b. Yellow into the (V) socket
2. Plug the other end into the signal input ports on the TV set, also matching the colors indicated.

Connecting the HDMI® cable

3. Connect one end of the supplied HDMI® cable into the Super Retro-Cade Console HDMI® port located on the back of the console:
4. Plug the other end into the signal input port on the TV set.

Connecting the Super Retro-Cade Console to the AC Adapter

- Plug the DC end of supplied power adapter into the DC socket on back of the Super Retro-Cade Console
- Plug the other end of the power adapter into wall outlet

Precautions on Using the Super Retro-Cade Adapter

- *Use ONLY the Super Retro-Cade AC Adapter included.*
- *Using a different AC adapter may damage your Super Retro-Cade Console.*
- *When not in use, unplug the AC adapter from the electrical outlet.*
- *Do not leave the system or any of its parts in direct sunlight, in damp areas or near a heater*
- *Do not disassemble the console or any of its parts.*

Setting the TV Channel

 
1. Make sure the Audio/Video or HDMI® Cable is connected correctly.
2. Select the Audio/Video or HDMI® Input setting on your TV, monitor, VCR or DVD player.

Operating your Super Retro-Cade Console


1. Make sure the power is “Off”
2. Plug your Super Retro-Cade Controllers into the respective Controller Slots on the front of the console.
3. To turn the power on, press down on the power button located on the top of the console until you hear a click sound.

NAVIGATING THE USER INTERFACE

Navigating the User Interface

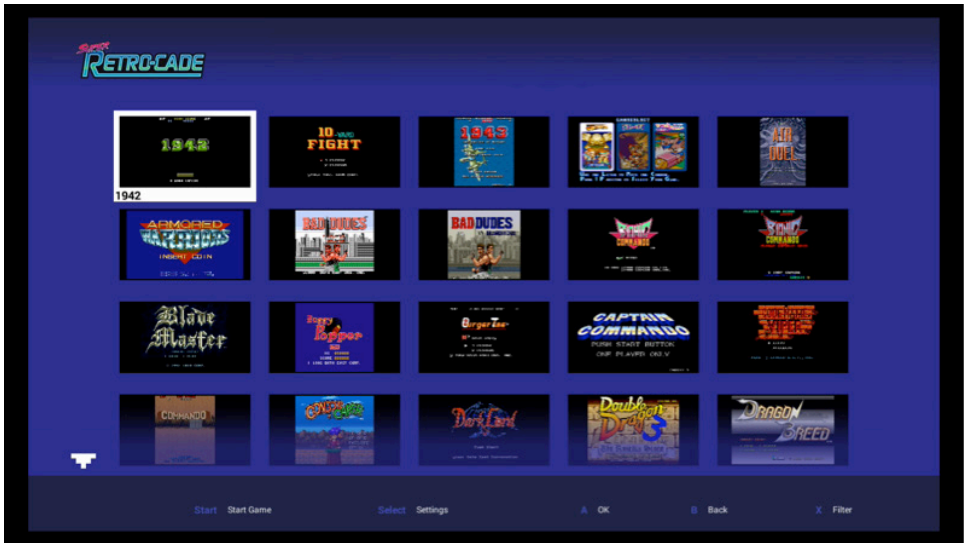


 - **Game List** - Here you will be able to see the available games. All the games are listed in alphabetical order.

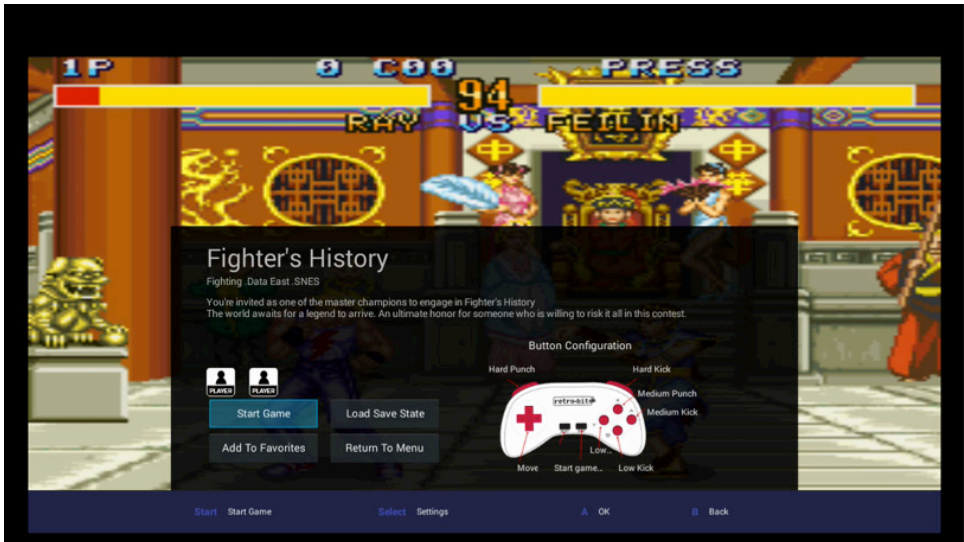

- **Game Screen** - Once you select the game you would like to play, you will reach this screen.

 - ◆ Current game Button Configuration Displayed for your Convenience.
- ◆ On this menu you will have the following options:
 - ◇ **Start Game** - Starts the game up.
 - * Some Arcade games will require coins, to insert coin press the **Select** button. Each press is one coin.
 - ◇ **Load Save State** - Load up one of your savestates.
 - ◇ **Add To Favorites** - Add game to your Favorites list.
 - ◇ **Return To Menu** - Exit back to the games list.

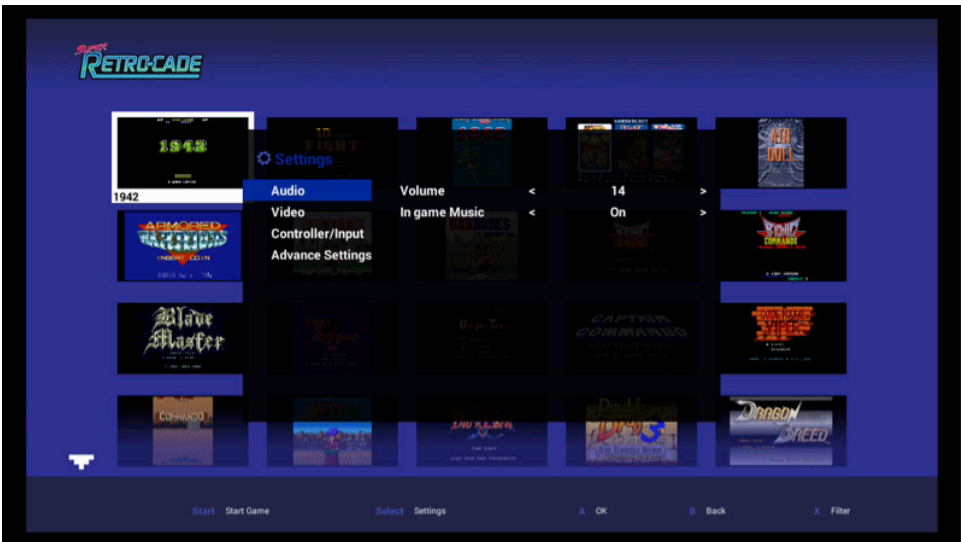

- **Console Settings** - To get to the console settings menu;
While on the games list screen - tap the Select button.
 - ◆ On this menu you will have the following options:
 - ◇ **Audio** - Adjust the overall volume of the consoles background music and turn music off.
 - ◇ **Video** - Adjust the screen size to Full Screen or Original size.
 - ◇ **Controller/Input** - Remap your controller buttons, Make sure you save your settings if you are remapping your controls.
 - ◇ **Advanced** - Change language and do a system restore.



- **In Game Menu** - To get to this Menu while in game, you are going to want to press both the **START** and **SELECT** buttons together.
 - ◆ On this menu you will have the following options:
 - ◇ **Return to Game** - Return to the point of the game you entered into this menu from.
 - ◇ **Load Save State** - Loads you to the point of your most recent game save.
 - * **SD Card** - Load save state from SD Card..
 - * **Internal Storage** - Load save state from Internal Storage.
 - ◇ **Save State** - Save your game so you don't have to start over
 - * **SD Card** - Save your current game state to an SD card.
 - * **Internal Storage** - Save your current game state to the console.
 - ◇ **Button Mapping** - Remap your controller buttons, Make sure you save your settings if you are remapping your controls
 - ◇ **Game Volume** - Adjust volume for current game.
 - ◇ **Reset Game** - Reset game to its default settings - High Scores will be reset and Save States will be deleted.
 - ◇ **Exit** - Return to the Games list

Troubleshooting

PROBLEM	SOLUTION
Console is not turning on.	<ul style="list-style-type: none">• Is the AC adapter properly connected to the console?• Is the AC adapter connected to a working power source?• Press the Power button down until you hear or feel it click.
No picture on the screen.	<ul style="list-style-type: none">• Is the TV turned on?• Is the HDMI® cable connected properly to the TV and console?• Is the AV cable connected to the correct Input on the TV?• Do you have both AV and HDMI® cables connected? If so switch the TV input/channel from AV to HDMI®.• Is the console turned on?• Disconnect all cables from the console and TV, and then reconnect the cables.
Not getting any sound.	<ul style="list-style-type: none">• Is the TV volume too low or on mute?• Is the Consoles' Game Volume turned up or down?• Did you verify that the left and right audio cables are connected to the same input section as your video cable?
The picture looks Blurry, Pixelated or stretched out.	<ul style="list-style-type: none">• Do you have the screen size set to full screen? Go into Game Settings, select Screen Size, and select Original Size.
The controller is not working.	<ul style="list-style-type: none">• Is the controller properly connected to the console?• Is the controller connected to the player 1 port?• With the controller connected to the player 1 port, turn the console off, wait 15 to 20 secs and turn the console ON.

PROBLEM	SOLUTION
The Games do not want to load.	<ul style="list-style-type: none"> • Turn the console off, Disconnect the AC adapter, Wait 15 to 20 seconds, Reconnect the AC adapter, turn the console ON and load a game. • Only do this step if the above did not work: Go into the console Settings, Select Advanced, Select Reset Default Settings, Select YES.
Can't save to the SD Card	<ul style="list-style-type: none"> • Verify the SD card is not locked • Is the SD card Full? <ul style="list-style-type: none"> ◊ Try a different SD Card

For questions, inquiries or technical support e-mail service@retro-bit.com

SUPER
RETRO-CADE